

 
Seat Ventilation with Heated Seats , (4D3),(4V1),(Q1A)

From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin




ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

J136	Memory Seat/Steering Column Adjustment Control Module
S44	Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
S133	Safety Fuse 3
T12x	12-Pin Connector
T17m	17-Pin Connector, In the Coupling Point for the Left Front Seat
T32m	32-Pin Connector

- 34 Ground Connection Under Driver Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- B316 Positive Connection 2 (30a) (in Main Wiring Harness)
- M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Depending on Equipment

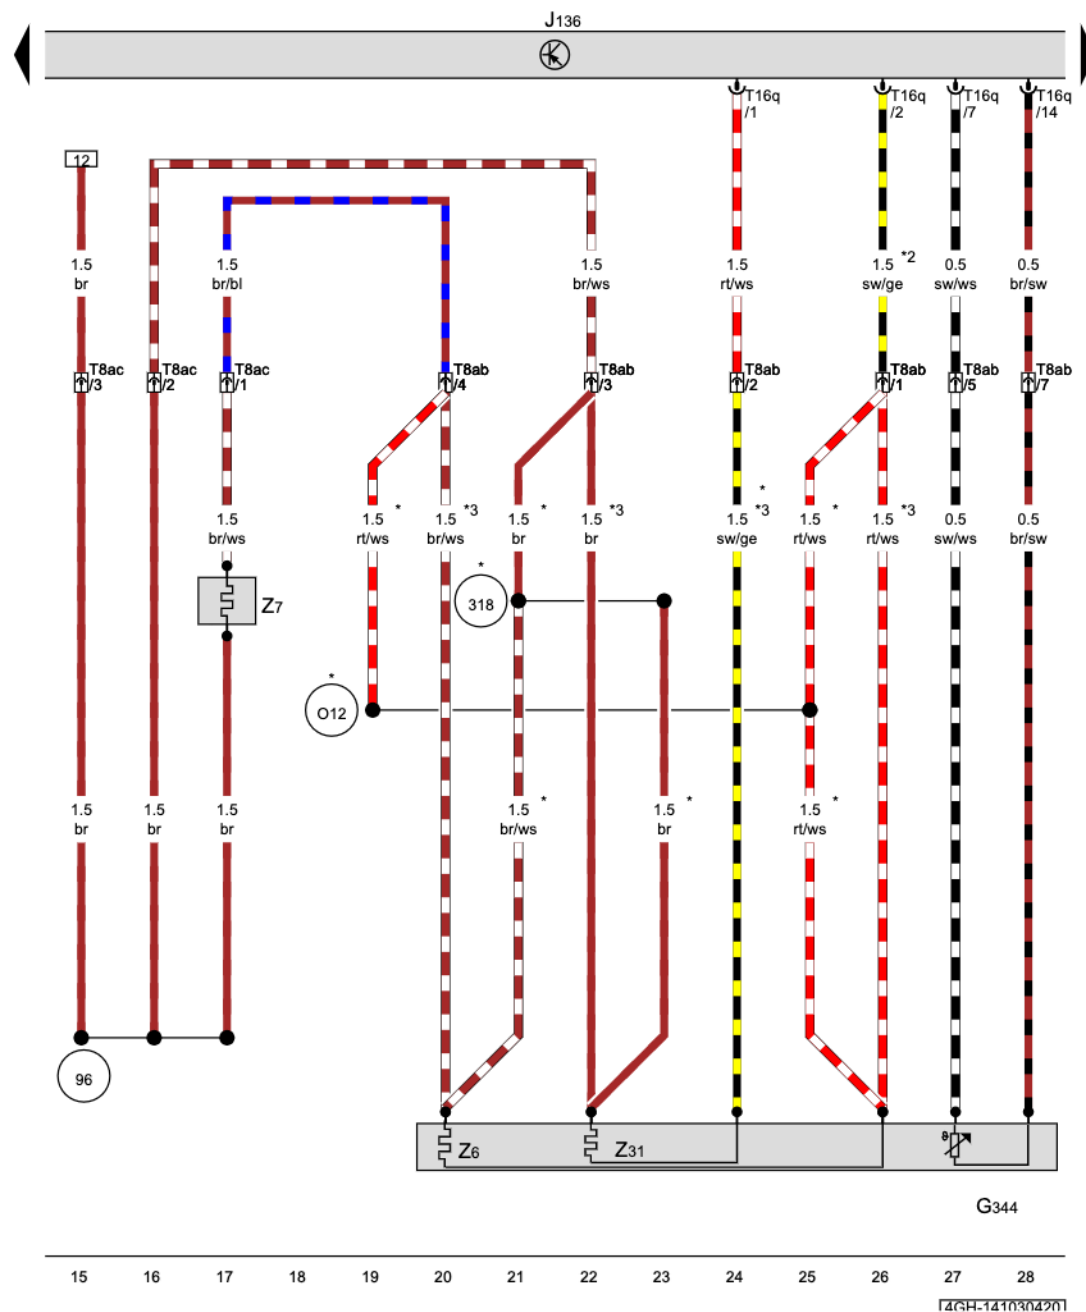

Left Front Seat Temperature Sensor, Memory Seat/Steering Column Adjustment Control Module, Driver Seat Heating Element, Driver Backrest Heating Element

- G344 Left Front Seat Temperature Sensor
- J136 Memory Seat/Steering Column Adjustment Control Module
- T8ab 8-Pin Connector, In the Driver Seat, Brown
- T8ac 8-Pin Connector, In the Driver Seat, Black
- T16q 16-Pin Connector
- Z6 Driver Seat Heating Element
- Z7 Driver Backrest Heating Element
- Z31 Driver Seat Bolster Heater

96 Ground Connection 1 (in Heated Seats Wiring Harness)


318 Ground Connection 4 (in Heated Seats Wiring Harness)

O12 Connection 1 (in Heated Seats Wiring Harness)

- * Version 2
- *2 Depending on Equipment
- *3 Version 1

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- lilac = lilac
- vi = violet
- ge = yellow
- or = orange
- rs = pink

Memory Seat/Steering Column Adjustment Control Module,
Driver Seat Backrest Blower Fan, Driver Seat Cushion
Blower Fan

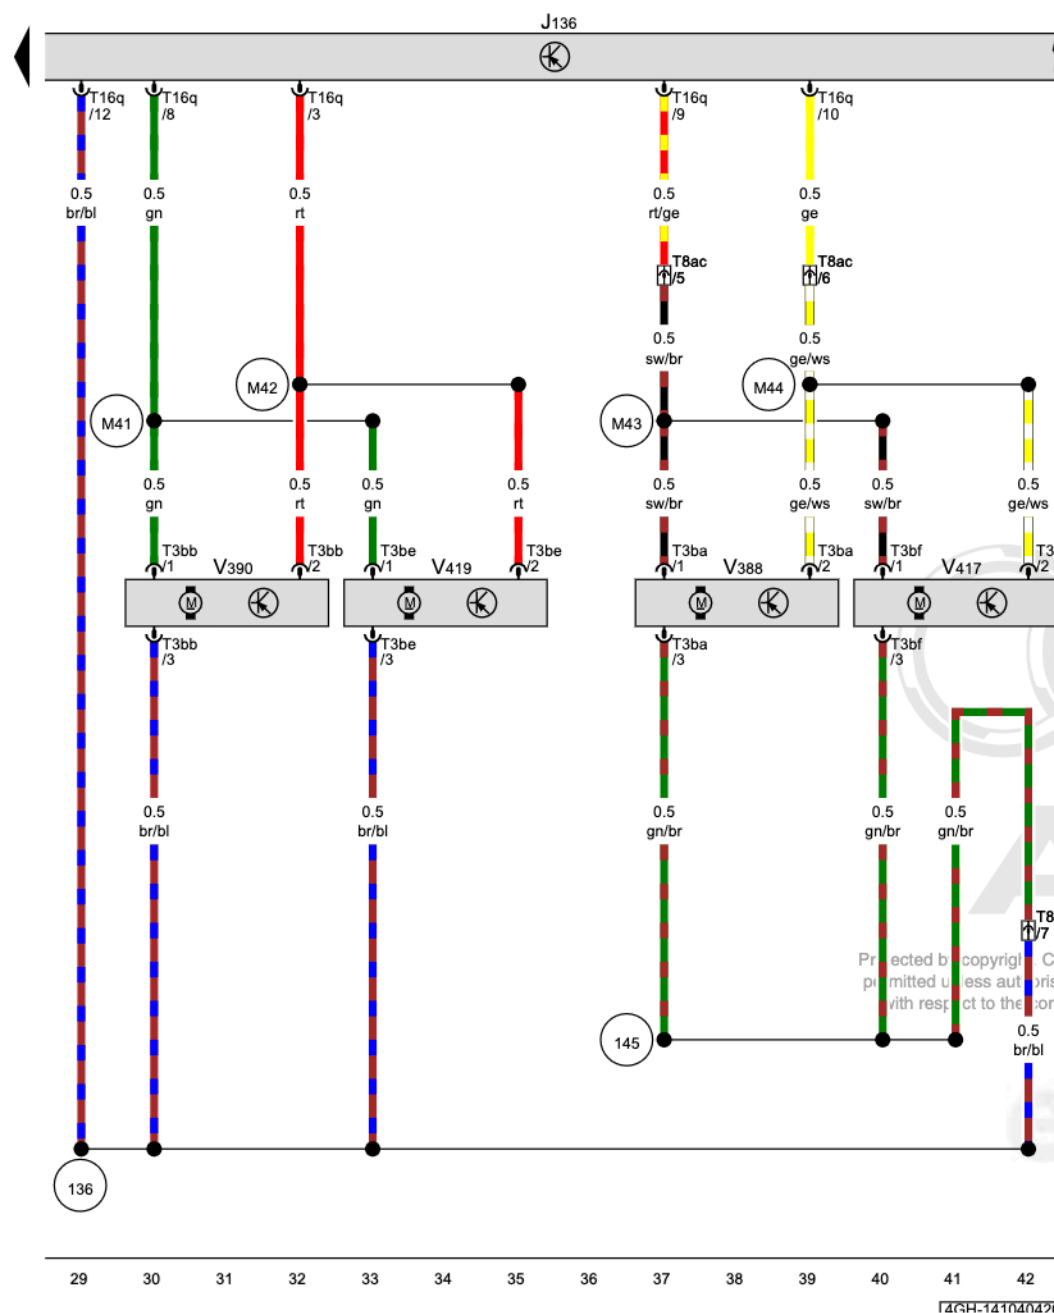


- J136 Memory Seat/Steering Column Adjustment Control Module
- T3ba 3-Pin Connector
- T3bb 3-Pin Connector
- T3be 3-Pin Connector
- T3bf 3-Pin Connector
- T8ac 8-Pin Connector, In the Driver Seat, Black
- T16q 16-Pin Connector
- V388 Driver Seat Backrest Blower Fan
- V390 Driver Seat Cushion Blower Fan
- V417 Driver Seat Backrest Blower Fan 2
- V419 Driver Seat Cushion Blower Fan 2
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M41 Connection 1 (in Driver Seat Wiring Harness)
- M42 Connection 2 (in Driver Seat Wiring Harness)
- M43 Connection 3 (in Driver Seat Wiring Harness)
- M44 Connection 4 (in Driver Seat Wiring Harness)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Power Seat Adjustment Circuit Breaker 1


- J521 Front Passenger Memory Seat Control Module
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S131 Safety Fuse 1
- T12aa 12-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T32n 32-Pin Connector
- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Depending on Equipment
- *3 From June 2014

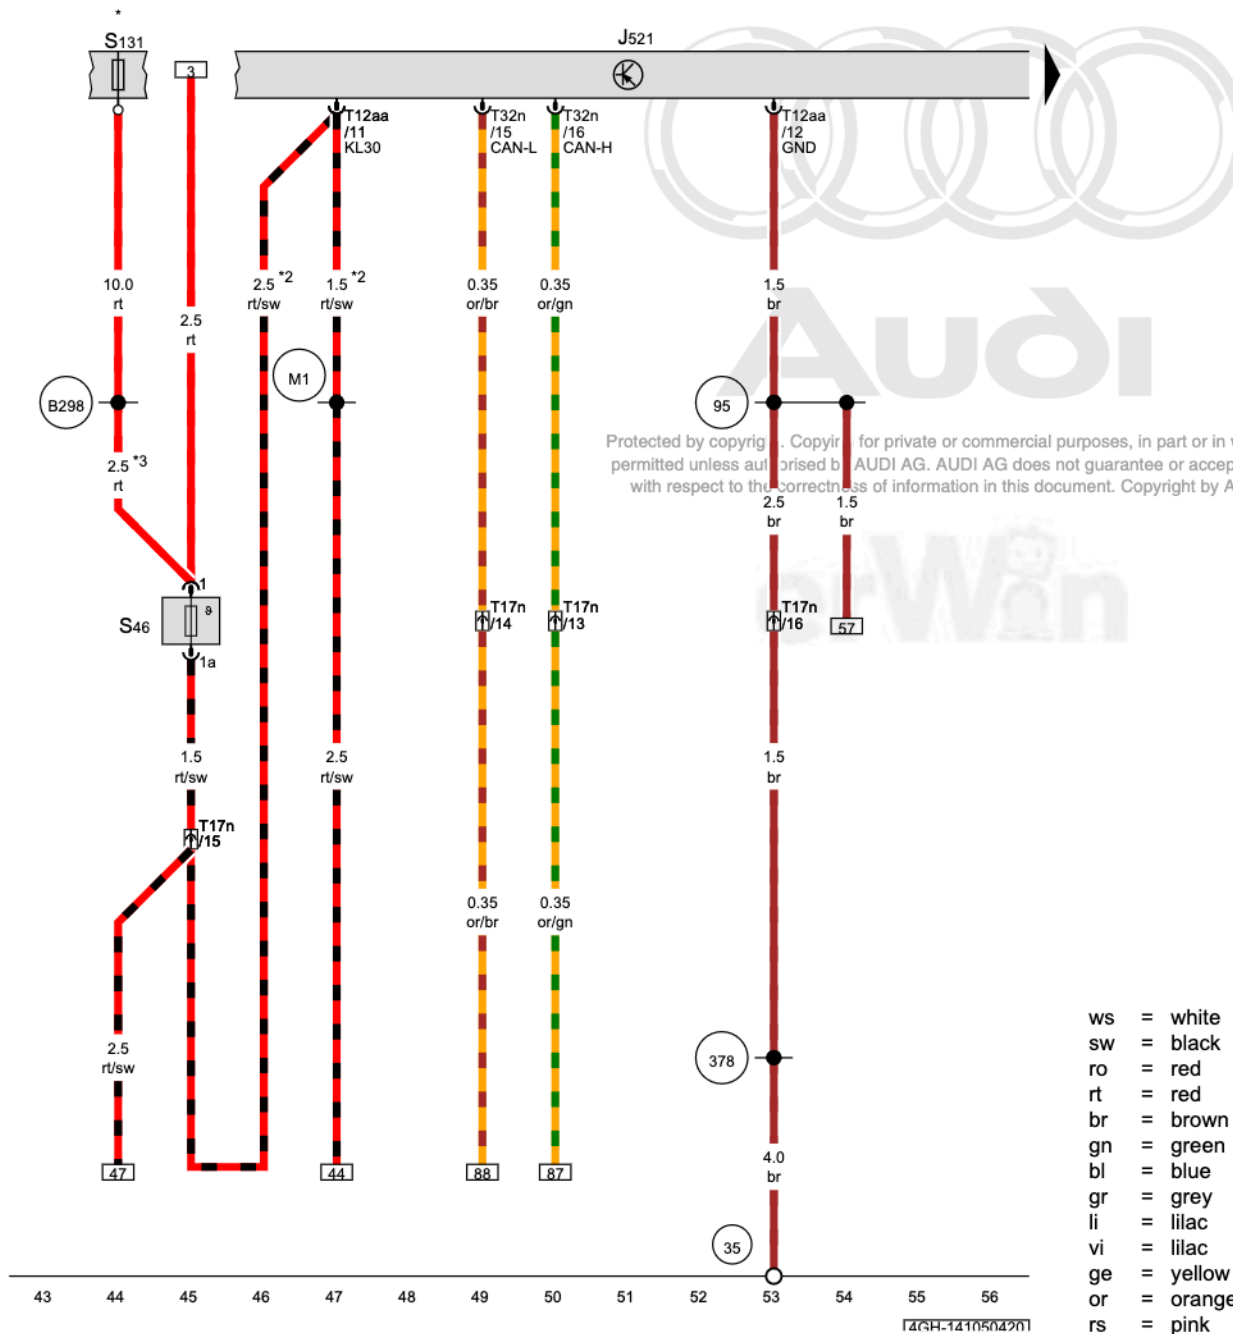

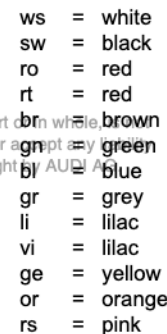

* Version 2
*2 Version 1

Front Passenger Memory Seat Control Module, Front Passenger Seat Backrest Blower Fan, Front Passenger Seat Cushion Blower Fan

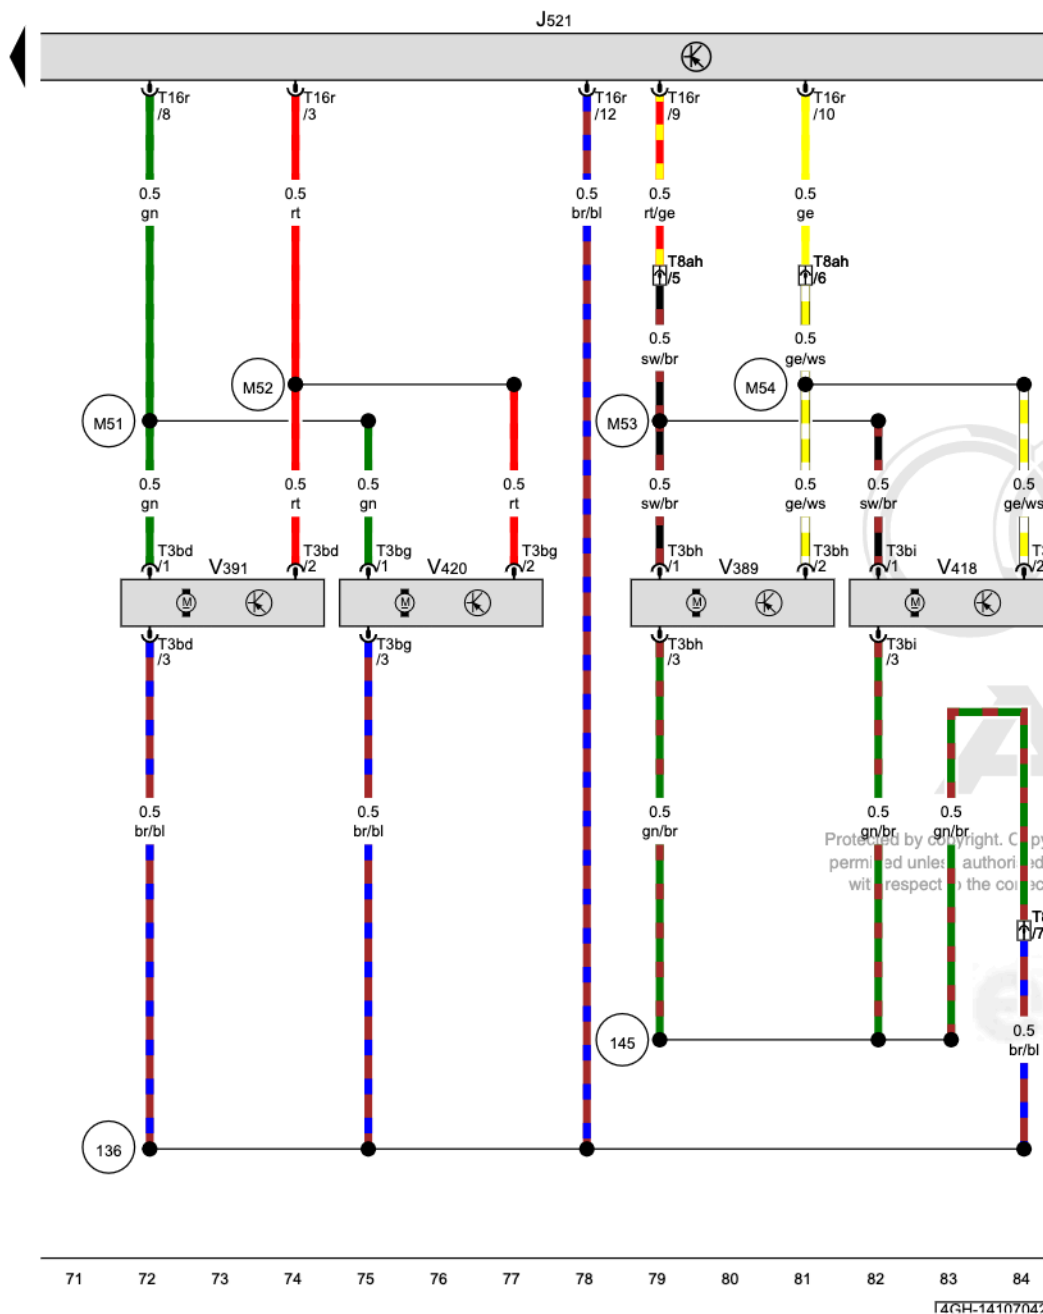


- J521 Front Passenger Memory Seat Control Module
- T3bd 3-Pin Connector
- T3bg 3-Pin Connector
- T3bh 3-Pin Connector
- T3bi 3-Pin Connector
- T8ah 8-Pin Connector, In the Front Passenger Seat, Brown
- T16r 16-Pin Connector
- V389 Front Passenger Seat Backrest Blower Fan
- V391 Front Passenger Seat Cushion Blower Fan
- V418 Front Passenger Seat Backrest Blower Fan 2
- V420 Front Passenger Seat Cushion Blower Fan 2
- 136 Ground Connection 2 (in Heated Seats Wiring Harness)
- 145 Ground Connection 3 (in Heated Seats Wiring Harness)
- M51 Connection 1 (in Front Passenger Seat Wiring Harness)
- M52 Connection 2 (in Front Passenger Seat Wiring Harness)
- M53 Connection 3 (in Front Passenger Seat Wiring Harness)
- M54 Connection 4 (in Front Passenger Seat Wiring Harness)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
Low Wire Junction, Comfort System CAN Bus Low Wire
Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- B397 Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- B406 Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)

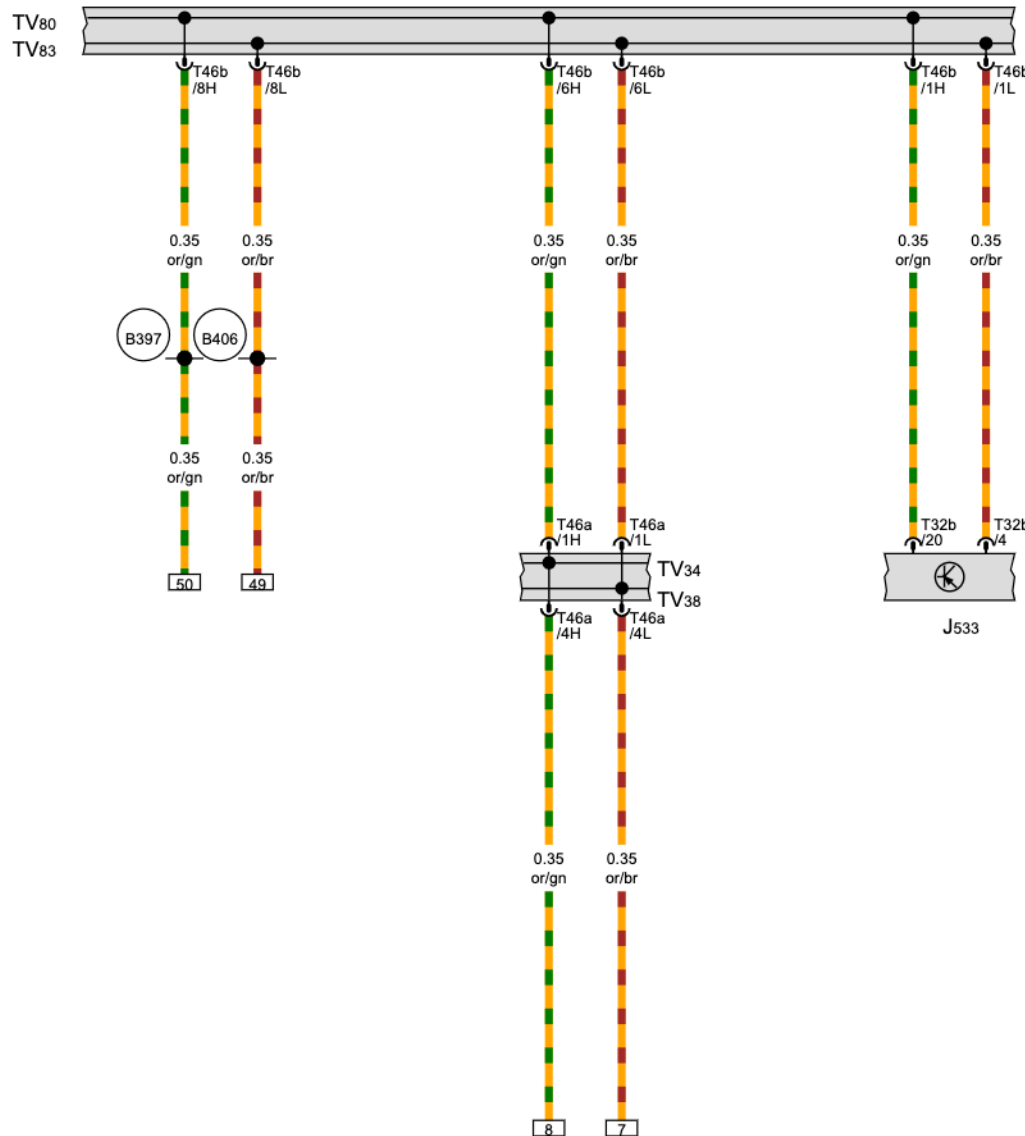

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink